


1.

Remove plastic cap from the air inlet.

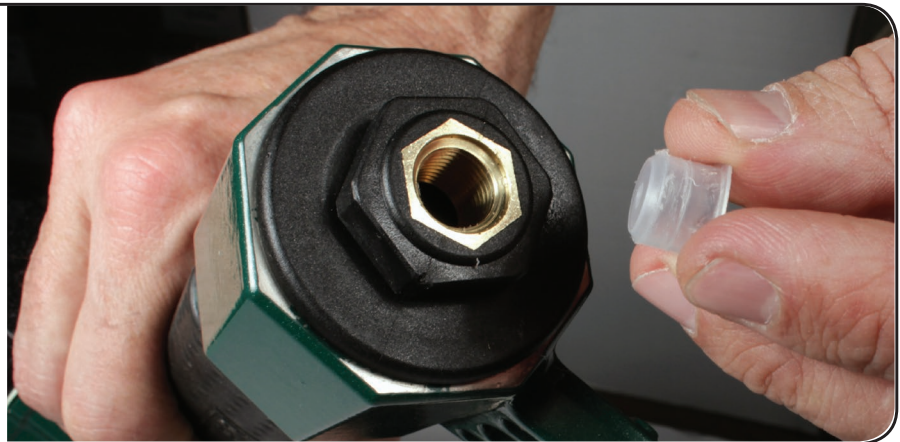

2.

Install an approved air fitting per your air system's specifications. This tool has a straight thread. If using a tapered thread fitting, you must use Teflon[®] tape.



3.

Attach the air hose and check for air leaks.




4.

To load nails, remove the air hose from the tool then slide the pusher towards the rear of the magazine.



5.

Insert one strip of F/15 or F/14 nails into the rear of the magazine channel with the points angled downward.

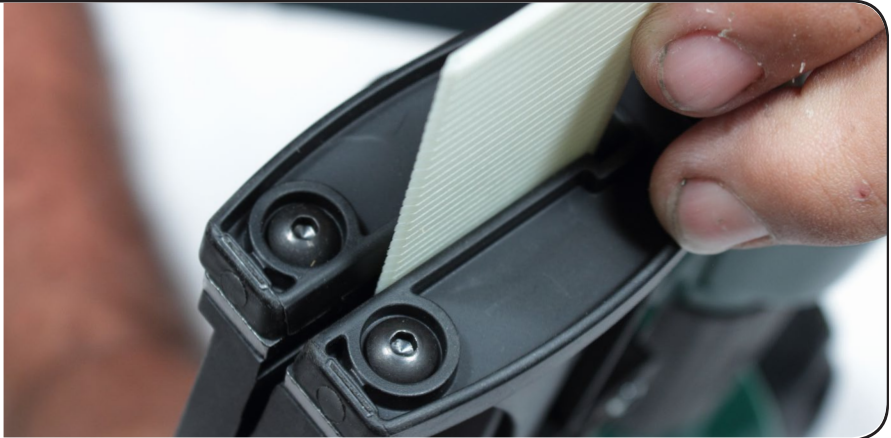


6.

Press the red button to release the pusher and gently slide it forward until it makes contact with the nails.

7.

Attach the air hose to the tool and operate at 90 psi.

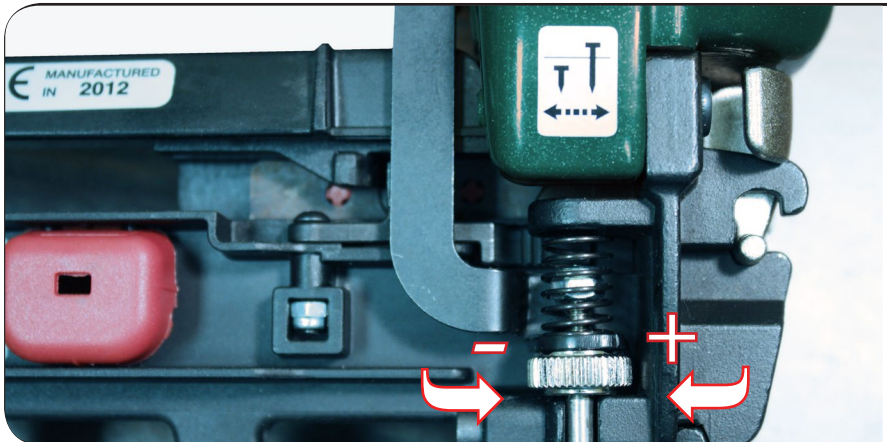

8.

Turn the dial to adjust the depth.
+ Increase fastener penetration.
- Decrease fastener penetration.