

INSTRUCTIONS FOR USING YOUR OMER 81P, 82P, 83P SERIES TOOLS



1.

Remove plastic cap from the air inlet.



2.

Install an approved air fitting per your air system's specifications. This tool has a straight thread. If using a tapered thread fitting, you must use Teflon® tape.




3.

Attach the air hose and check for air leaks.



4.

To load staples detach the air hose from the tool and depress the magazine locking pawl.

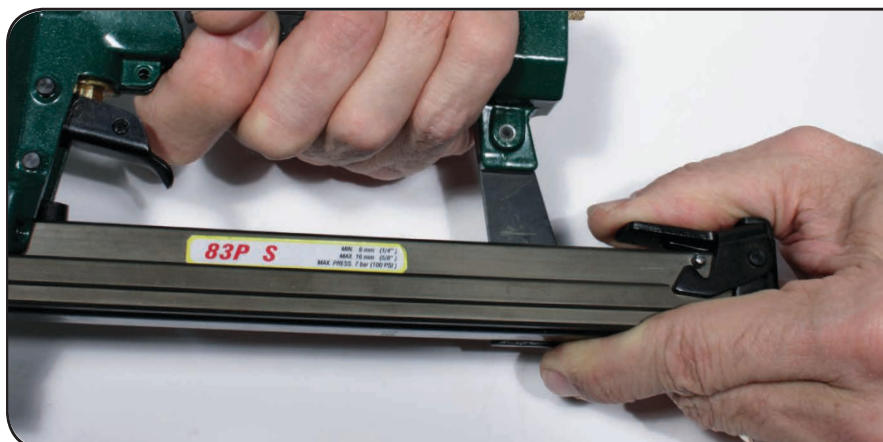

INSTRUCTIONS FOR USING YOUR OMER 81P, 82P, 83P SERIES TOOLS




5.

Pull back the magazine rail.



6.

Load one strip of staples at the bottom of the tool with points angled downward.

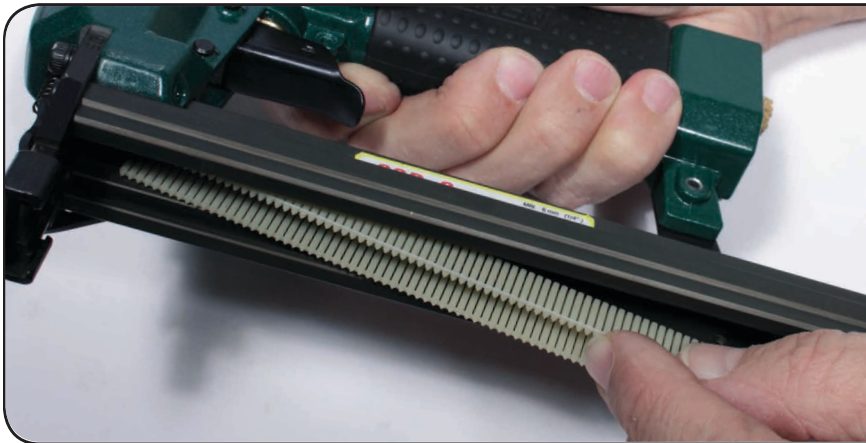

7.

Close and lock the magazine rail.



8.

Attach the air hose to the tool and operate at 90 psi.

